



**DISASSEMBLY:**

1. Make sure that the pump is disconnected from any electrical power source.
2. Disconnect motor lead wire and pigtail lead from the terminal contacts of the pressure switch.
3. Remove the old pressure switch by removing the four (\*or two) mounting screws.
4. The old switch can now be removed making sure to also remove the old diaphragm.

**ASSEMBLY:**

1. Install “new” adjustable switch with “new” diaphragm making sure the diaphragm is properly seated against the switch pressure button.
2. Secure the adjustable switch to the pump body and firmly tighten the four supplied mounting screws. Do not over-tighten!
3. Connect the motor lead wire and pigtail lead wire to the switch terminal contacts.
4. The pump is now ready for connection to electrical power.



\*ISO Certified Facility

**SHURflo ★**  
5900 Katella Ave.  
Cypress, CA 90630  
(800) 854-3218 (562) 795-5200  
FAX (562) 795-7554



SHURflo reserves the right to update specifications, prices, or make substitutions.

**SHURflo East**  
52748 Park Six Court  
Elkhart, IN 46514-5427  
(800) 762-8094  
(219) 262-0478  
FAX (219) 264-2169  
© 2001 Printed in USA

**SHURflo Ltd.**  
Unit 5 Sterling Park  
Gatwick Road, Crawley  
West Sussex, RH10 2QT  
United Kingdom  
+44 1293 424000  
FAX +44 1293 421880