

5th Wheel Landing Gear

Guides are only intended for use on Atwood® products by service technicians who have successfully completed Atwood® training. This guide should be used in conjunction with the appropriate Instruction Manual provided with the product and any applicable Industry Standards. This is not intended to be a complete list. Please direct questions concerning service of Atwood® products to 815-877-5700 or harry@atwoodmobile.com

 WARNING PERSONAL INJURY AND/OR PRODUCT DAMAGE If any of the following conditions develop, the trailer must not be used until proper corrective action is taken

DIFFICULT TO CRANK

CONDITION	SOLUTION
<ul style="list-style-type: none"> • Dry bevel gears • Dirt in gears • Broken teeth on bevels • Too much tongue weight 	<ul style="list-style-type: none"> • Grease gears • Clean and grease gears • Replace gears • Verify weight and determine if adequate rated leg is installed. Refer to specification sheet.

JACK LEG SEIZED OR NOT WORKING PROPERLY

CONDITION	SOLUTION
<ul style="list-style-type: none"> • Seized or stripped nut • Stripped or worn worm gear • Obstruction in bevel gears 	<ul style="list-style-type: none"> • Replace leg • Replace leg • Remove obstruction and grease gears

Creation
GROUP, INC.

DURALEG™
BY ATWOOD MOBILE PRODUCTS®


LEVELEGS™
BY ATWOOD MOBILE PRODUCTS

- | | |
|--|--|
| <ul style="list-style-type: none"> • Dirty inner ram tube • Bent inner ram tube • Vertical gear box • Too much tongue weight | <ul style="list-style-type: none"> • Clean ram tube and coat with light coat of silicon spray • Replace leg and insure vertical position • Replace gear box • Verify weight and determine if adequate rated leg is installed |
|--|--|

MOTOR WILL NOT OPERATE

CONDITION	SOLUTION
<ul style="list-style-type: none"> • No or low voltage • Blown fuse • Loose or disconnected wires at ON/OFF switch • ON/OFF switch • Motor • No or poor ground 	<ul style="list-style-type: none"> • Check battery and electrical connections. Must have minimum of 10 VDC • Replace with 10 amp AWG fuse • Secure wire connection • Replace switch • Replace motor • Re-establish good ground

MOTOR CLUTCH ENGAGES

CONDITION	SOLUTION
<ul style="list-style-type: none"> • Normal if leg is at fully extended or retracted position • Clutch 	<ul style="list-style-type: none"> • None, let go of switch when you hear the clutch • Replace motor

CONSUMER MAINTENANCE CHECKLIST

- **PERIODICALLY** inspect pad tube and inner ram
- **YEARLY** spray silicone in the inner tube and pad tube
- **YEARLY** spray silicone inside of handle alignment tube
- **YEARLY** grease gears in gear box and at top of each leg with extreme pressure grease
- **YEARLY** oil shaft bushings with S.A.E. 30 oil
- **TWICE A YEAR** clean your electrical connections with baking

soda, then cover with a thin coat of grease

* not covered under warranty

ATWOOD MOBILE PRODUCTS
1120 N Main St, Elkhart, Indiana 46514 574.264.2132