

Atwood Mobile Products

4750 Hiawatha Drive • Rockford, IL 61103-1298 **PHONE**: 815 • 877 • 5700 **FAX**: 815 • 877 • 7469

INTERNET: http://www.atwoodmobile.com





hydro flame™


UNIVERSAL DC Ignition Control Kit

ENGLISH, FRANCAIS (et Canada)


FUNCTIONS -

- A. Direct field replacement for any 12 volt DC DSI board.
- B. Operates control blower, giving a diagnostic error flash code for four faults within the system (wires included) EXCEPT FA-78, DC-82, 85-1 & II & 89-II.
- ① DISCONNECT BLUE wire from relay to splice and discard see ⑥
- ② DISCONNECT RED wire from relay see ⑦
- ③ DISCONNECT RED wire from relay see ⑧
- ① DISCONNECT YELLOW/BLACK wires from relay. Leave splice connection intact.
- (5) DISCARD old relay.

8500 FURNACE - OLD CONTROL

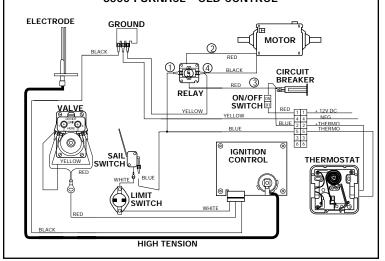

- ⑥ CONNECT BLUE kit wire (1/4" male x 316" female terminal) into splice and plug into edge connector position 2 next to white wire ⑥ XX Use splice 7900 series only.
- ① CONNECT RED kit wire (1/4"male x 1/4" female and plug into new DSI "BLW" terminal ② x Kit wire not needed on 7900 series.
- ® CONNECT RED kit wire (1/4"male x 3/16" female and plug into new DSI "PWR" terminal. xxx Kit wire only on 8900 series.
- Leave splice connection intact

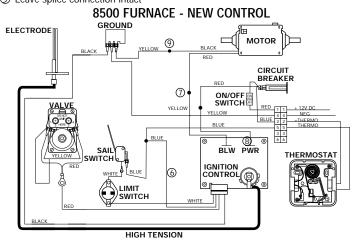

•Installation Effective 8/3/01

KIT INCLUDES:	
CABLE TIE (1)	Use to secure new wiring
BOARD, DSI WITH RELAY (1)	
STANDOFF (2)	If needed to space control
STICKER, DIAGNOSTIC CODE	Apply to blower housing
WIRE ASSEMBLY, BLUE, _SPLICE-DSI TH	
WIRE ASSEMBLY, RED, _DSI BLW -(+) MOTOR (2)	
WIRE ASSEMBLY, RED, C/B-DSI POWER	
FOLD OVER SPLICE	Used on 79/80 models only.

