
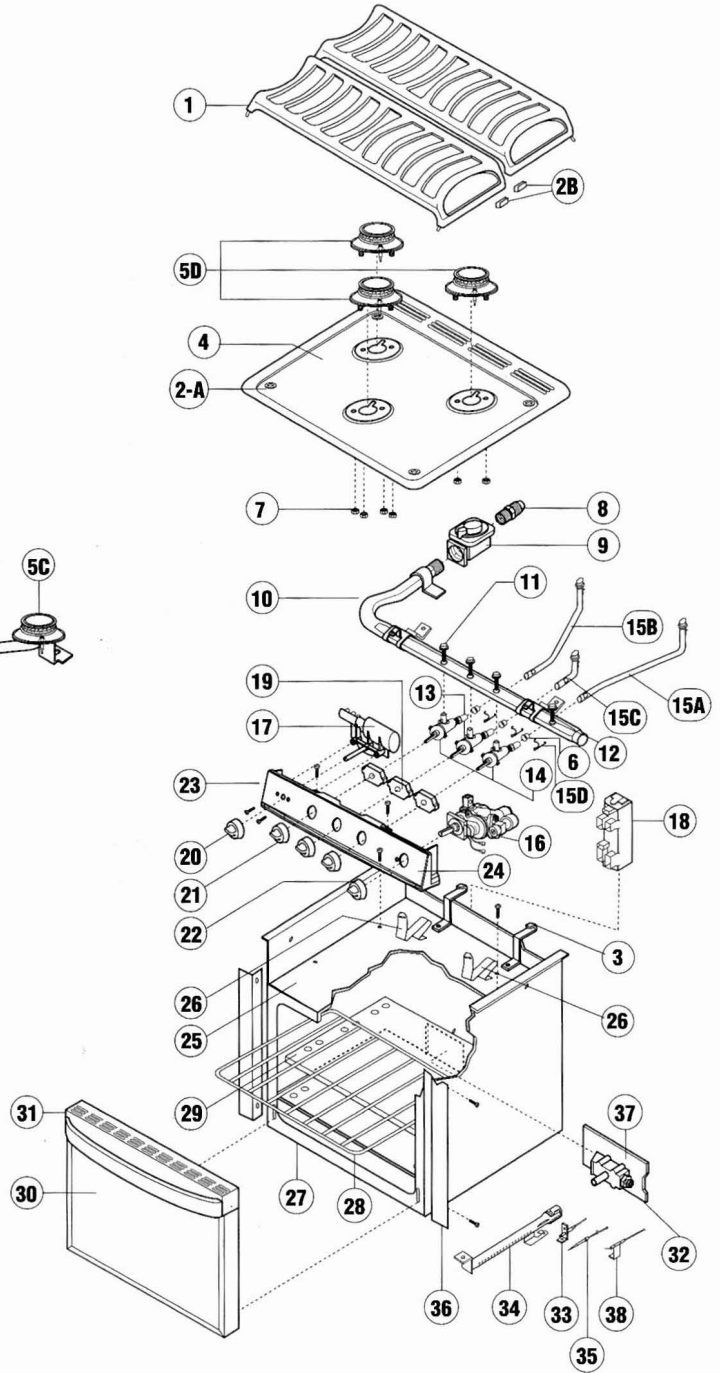


RV Series Range & Slide-In Match Light and Piezo

RA Series Range & Slide-In Piezo and Electronic Ignition

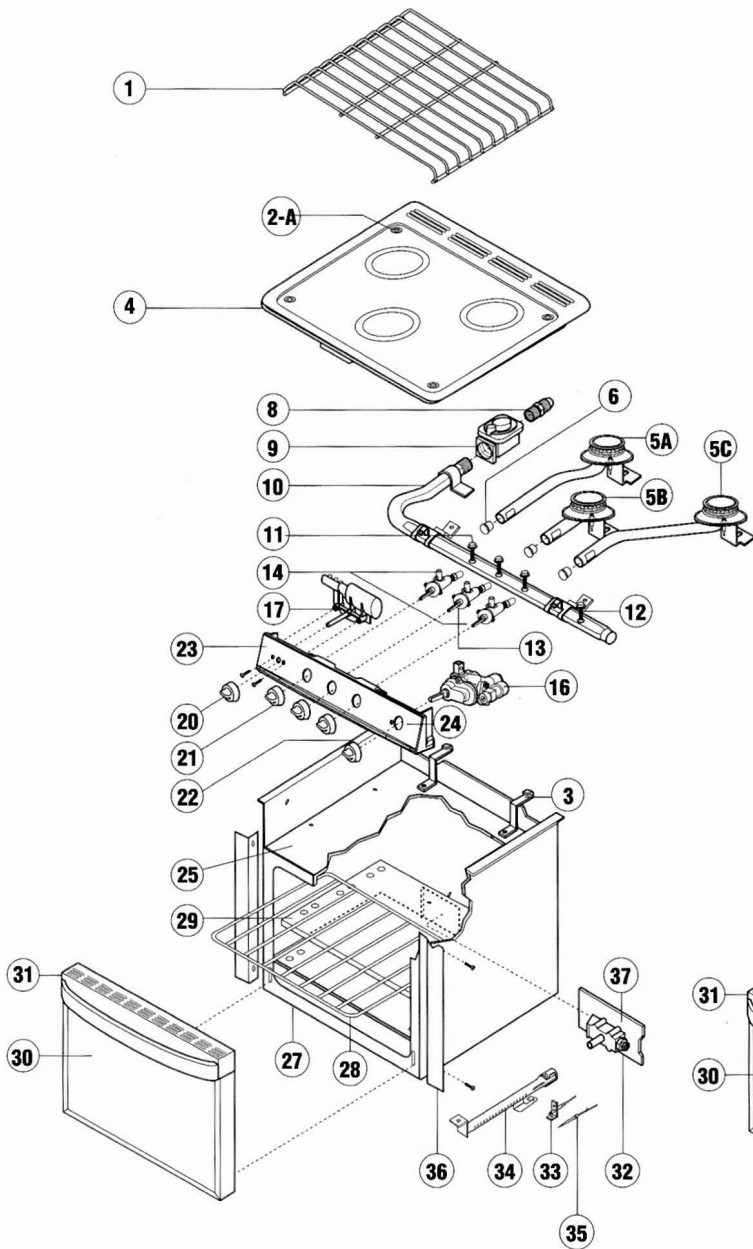

Order by model, color and style not shown in illustration ◆ commander par couleur pas montré

ATWOOD & WEDGEWOOD

Oven & Slide-In Cooktop Parts Identification

ITEM	DESCRIPTION	WEDGEWOOD			ATWOOD		
		RV		CV	RA		CA
		1733	2133	33	1733	2133	33
1	Grate - black	56272	56272	56272	57190	57190	57190
2A	Grommet (4)	53009	53009	53009	53009	53009	53009
2B	Sealed Grate U-Channel				57194	57194	57194
3	Top Spring Clip (2)	51035	51035	51035	51035	51035	51035
4-A	Range Top Assy - white	52007	52007	52007	57300	57300	57300
4-B	Range Top Assy - black	52008	52008	52008	57299	57299	57299
4-C	Range Top Assy - bisque	52009	52009	52009			
4-D	Range Top Assy - stainless steel	56742	56742	56742	57309	57309	57309
5-A	Burner, Piezo - left rear	57205	57205	57205			
5-A	Burner, Matchlit - left rear	57206	57206	57206			
5-B	Burner, Piezo - center front	57201	57201	57201			
5-B	Burner, Matchlit - center front	57202	57202	57202			
5-C	Burner, Piezo - right rear	57203	57203	57203			
5-C	Burner, Matchlit - right rear	57204	57204	57204			
5-D	Burner, Piezo/Electronic Ignition				57276	57276	57276
6	Bushing, Burner (3)	53011	53011	53011	53011	53011	53011
7	Hex Nut (2)				51004	51004	51004
8	Brass Fitting	52294	52294	52294	52294	52294	52294
9	Pressure Regulator	51062	51062	51062	51062	51062	51062
10	3-Burner Manifold	57270	57270	57268	57270	57270	57268
11	Valve thru Bolt	57278	57278	57278	57278	57278	57278
12	Bolt Oven Thermostat thru Bolt (1)	57266	57266		57266	57266	
13	Valve, Burner-Mini 9000 BTU (1)	57252	57252	57252	57252	57252	57252
14	Valve, Burner-Mini 6500 BTU (2)	57251	57251	57251	57251	57251	57251
15-A	Burner Tube Assy- right rear				57110	57110	57110
15-B	Burner Tube Assy- left rear				57108	57108	57108
15-C	Burner Tube Assy- center front				57109	57109	57109
15-D	Burner Clip, wire (3)				57198	57198	57198
16A	Thermostat, oven control	57294	57294		57294	57294	
16B	Thermostat, oven control w/switch				57265	57265	
17	Piezo Ignitor	56096	56096	56096	56096	56096	56096
18	12V Ignition Module				57277	57277	57277
19	Valve Ignition Switch				56163	56163	56163
20A	Piezo Knob -black	51344	51344	51344	51344	51344	51344
20B	Piezo Knob -white	53223	53223	53223	53223	53223	53223
21A	Burner Knob - black	56148	56148	56148	56148	56148	56148
21B	Burner Knob - white	53221	53221	53221	53221	53221	53221
22A	Oven Thermostat Knob - black	57258	57258		57258	57258	
22B	Oven Thermostat Knob - white	57291	57291		57291	57291	
23	Control Panel Assy- w/o Label	◆	◆	◆	◆	◆	◆
24	Control Panel Label	◆	◆	◆	◆	◆	◆
25	Burner Box	51687	51687	51687	51687	51687	51687
26	Burner Spring Clips (3)				57095	57095	57095
27	Oven Can	51969	51970		51969	51970	
28	Oven rack	51069	51069		51069	51069	
29	Oven shelf	51670	51670		51670	51670	
30-A	Door assembly includes handle - black steel	51977	51983		51977	51983	
30-B	Door assembly includes handle - white steel	51978	51984		51978	51984	
30-C	Door assembly includes handle - white glass	51981	51987		51982	51988	
30-D	Door assembly includes handle - black glass	51980	51986		51980	51986	
30-E	Door assembly includes handle - stainless steel	51958			51958		
30-F	Door assembly white handle - white steel	51957			51957		
31A	Oven Door Handle - black	51124	51124		51124	51124	
31B	Oven Door Handle - white	51126	51126		51126	51126	
32	Orifice Block	57271	57271		57271	57271	
33	Pilot Assembly	57250	57250		57250	57250	
34	Burner, oven	57275	57275		57275	57275	
35	Thermocouple	57274	57274		57274	57274	
36	Oven Can Trim	51975	51976		51975	51976	
37	Orifice Block Plate	57310	57310		57310	57310	
38	Spark Electrode				57292	57292	
N/S	Wiring Harness - Electronic Ignition Switches				57262	57262	57262
N/S	Wiring Lead - Electronic Ignition Electrodes				57261	57261	57261
N/S	Wiring Lead - Electronic Ignition Ground				57260	57260	57260
N/S	Wiring Lead - Piezo	57264	57264	57264	57264	57264	57264
N/S	KIT - Door Seal	51060	51061		51060	51061	
N/S	KIT - Gas Tube Supply Oven	57273	57272		57273	57272	